

NOGGING SCHEDULE

Up to 2.425 High


Booking Installation - 09 6389474

Call us a minimum of 2 weeks before requested installation date to book install.

To avoid a non-install charge (\$120) please ensure;

- 1) Lining on ceiling walls are complete
- 2) Garage is clear 4m back from the door
- 3) Clear access on garage driveway
- 4) Access to power supply in garage
- 5) All Nogs ready as per this sheet

6) We need a minimum of 48 hours to change the installation date once it is booked !

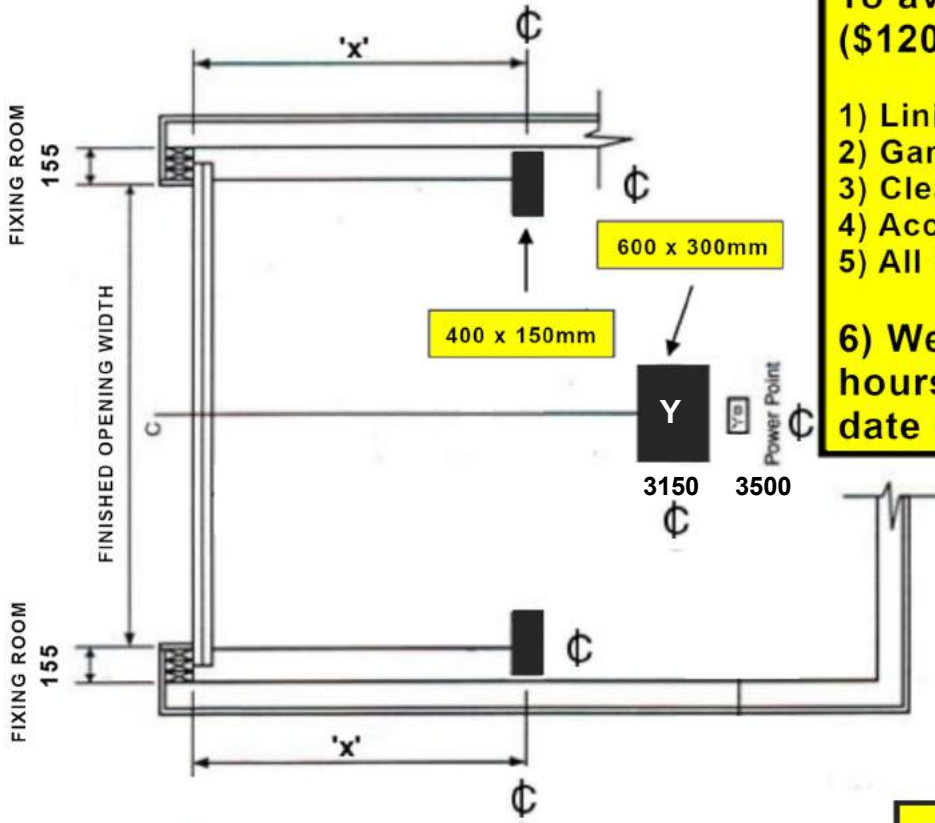

Fixing

| DOOR HEIGHT | "X" |
|--------------|------|
| Up to 2200mm | 2100 |
| 2201 to 2425 | 2340 |

Measurements after Gib is installed

| | Standard | Low |
|--------------------|---------------------|----------------------|
| Headroom | 350mm | 200mm |
| Sideroom | 155mm | 110mm+ |
| Backspace to Motor | Door Height + 900mm | Door Height + 1100mm |

If Coving is being used, the headroom is taken from the bottom of the coving

NOTE: Doors over 150kg require


- Fixings at 1/2x and 1/2y

Please Consult your Sales Rep for;

- Doors over 6000w
- Doors over 200kg

☺ All Nogs must be centred

Any Questions call your Sales Representative or Prestige Office on 09 638 9474

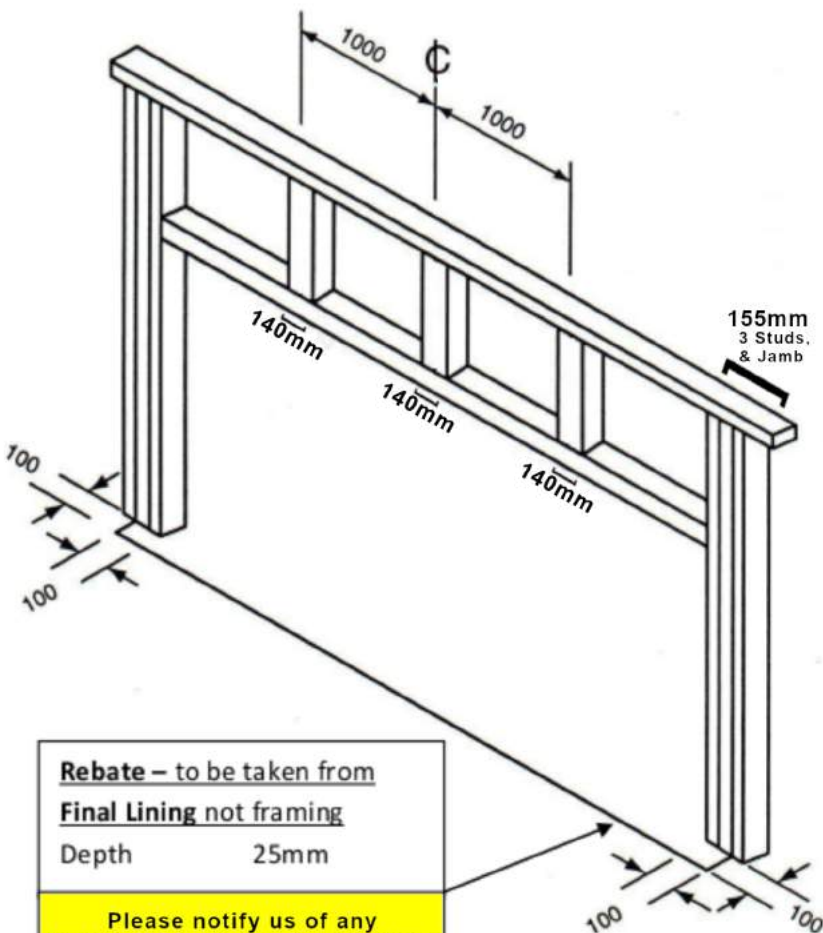

Rebate – to be taken from Final Lining not framing
Depth 25mm

Please notify us of any Architrave additions / Alterations

NOGGING SCHEDULE

2.425 - 2.75m High


Booking Installation - 09 6389474

Call us a minimum of 2 weeks before requested installation date to book install.

To avoid a non-install charge (\$120) please ensure;

- 1) Lining on ceiling walls are complete
- 2) Garage is clear 4m back from the door
- 3) Clear access on garage driveway
- 4) Access to power supply in garage
- 5) All Nogs ready as per this sheet

6) We need a minimum of 48 hours to change the installation date once it is booked !

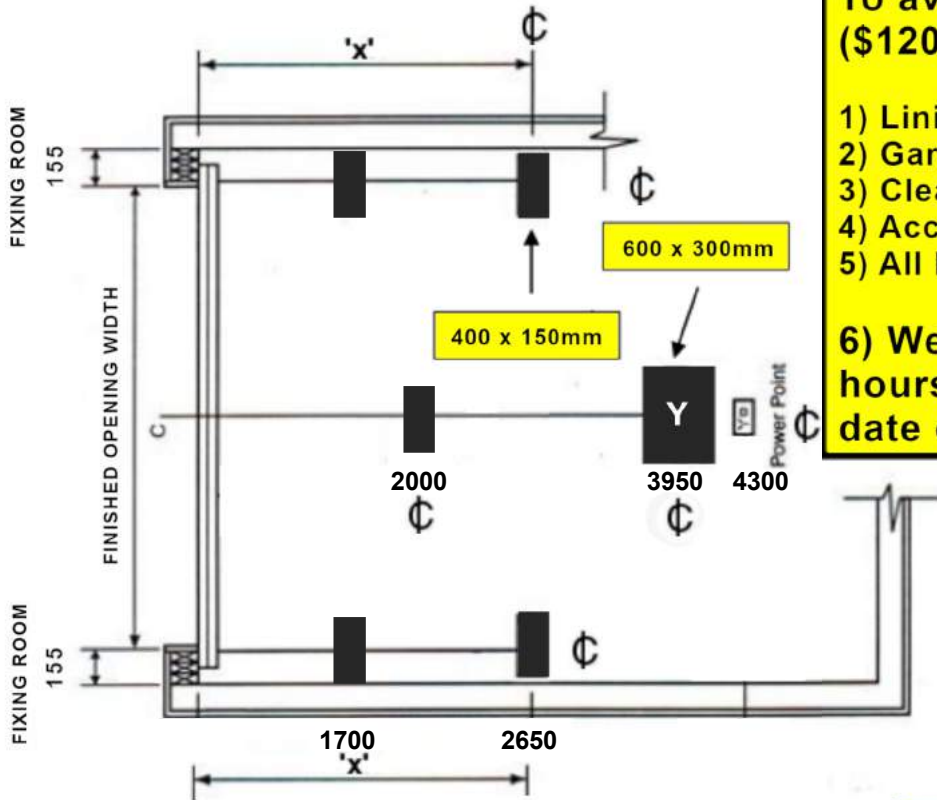

Fixing

| DOOR HEIGHT | "X" |
|----------------|-------------|
| 2425 to 2750mm | 1700 & 2650 |

Measurements after Gib is installed

| | Standard | Low |
|--------------------|---------------------|----------------------|
| Headroom | 350mm | 200mm |
| Sideroom | 155mm | 110mm+ |
| Backspace to Motor | Door Height + 900mm | Door Height + 1100mm |


If Coving is being used, the headroom is taken from the bottom of the coving

Please Consult your Sales Rep for;

- Doors over 6000w
- Doors over 2750h
- Doors over 200kg

⊕ All Nogs must be centred

Any Questions call your Sales Representative or Prestige Office on 09 638 9474

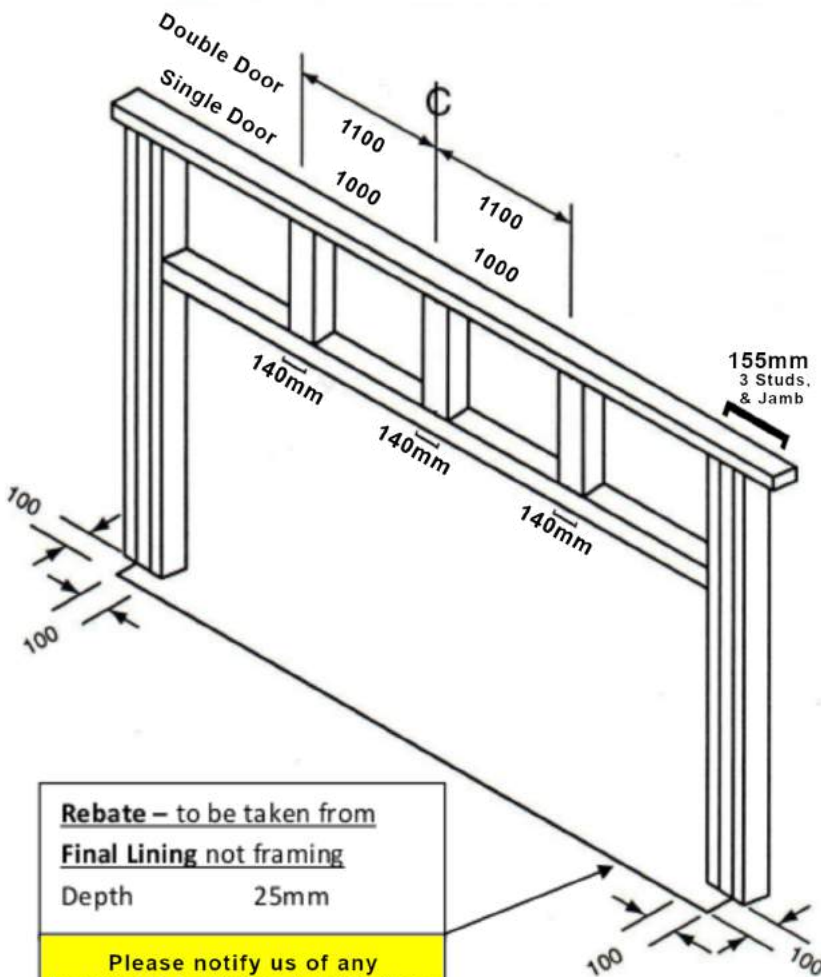

Rebate – to be taken from Final Lining not framing
Depth 25mm

Please notify us of any Architrave additions / Alterations